Instructions

Artificial plant potting

Step 1.

Place a piece of styrofoam in the pot to raise the artificial plant.

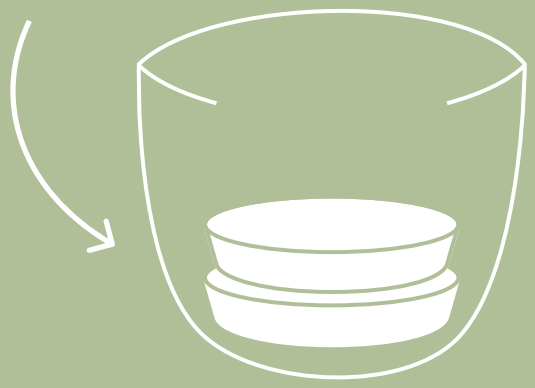

Step 2.

Set the artificial plant straight and stable on the styrofoam.



Step 3.

Fill the gap between the styrofoam and the pot with expanding foam for a firm hold. Let it cure fully.

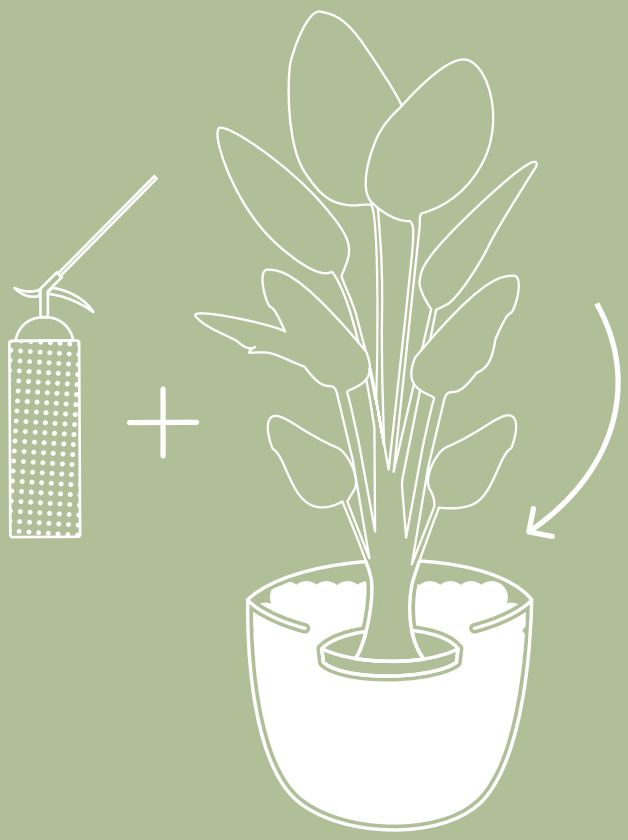

Step 4.

Finish the top with pebbles, bark or clay pebbles for a natural look.

